

# Fuel Sender Installation

- 1) For tank depths of 6" to 15-1/2", it will be necessary to remove the lower mounting bracket.
  - a. Begin by removing the two screws and nuts from the lower mounting bracket. These will be discarded.
  - b. Remove the two screws from the plastic rheostat housing. Save these screws to use later.
  - c. Remove the plastic rheostat housing from the lower mounting bracket and then discard this portion of the mounting bracket.
  - d. Reinstall the plastic rheostat housing to the upper mounting bracket and secure using the screws you removed in step "b". (for tank depths 6-7 inches, the top screw is not needed)
- 2) Adjust the float length and pivot point for the tank's depth. See diagram below.

