

Fuel Pump Safety Pressure Switch Instructions



1. **Disconnect ground cable from battery.**
2. **Remove the original equipment oil pressure switch and keep.**
3. **Apply pipe thread tape to all male pipe thread fittings (male pipe on tee, original oil pressure switch, and oil pressure safety switch).**
4. **Screw in 1/8" pipe tee into the hole where the pressure switch was removed. Position in a manner to allow the installation of the original pressure switch and the new safety switch.**
5. **Screw in the two switches.**
6. **Reconnect the wires to the original equipment oil pressure switch.**
7. **Wire safety switch as shown below.**
8. **To complete installation connect the ground battery cable.**

